

Installation Instructions



Warning, before installation you must ensure that the wall you are fixing to is free from any hidden electrical wire or pipe work. If in doubt consult with a qualified trades person. Installation of the shelf must be carried out by a competent person. For best results we strongly recommend that our shelves are fixed to a solid built wall (Brick or concrete).

Parts included;

x1 - Floating Shelf



x2 - Shelf Supports



x4 - Coach Screws



x4 - Wall Plugs



You will need;

Pencil



 
Tape Measure



Spirit Level



Power Drill

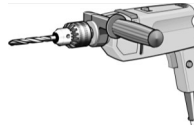

10mm Masonry Drill Bit



Hammer



10mm Hex Socket

 


Adjustable Spanner



Installation


- 1) Place one shelf support in the desired location and mark the hole positions on the wall.
- 2) Draw a level line from the first hole positions, measure and mark the hole positions for the second shelf support.
- 3) Drill the holes using a 10mm masonry drill bit. ensure the holes are deeper than the length of the screws.
- 4) Knock the wall plugs into the holes finishing just under the surface of the wall.
- 5) Screw the shelf supports to the wall ensuring a strong hold.
- 6) The shelf can now be fitted to the supports and adjusted in the height and inclination as shown below ;
- 7) Once adjusted level, secure the shelf to the wall by running a thin bead of clear silicon down the back edge of the shelf.

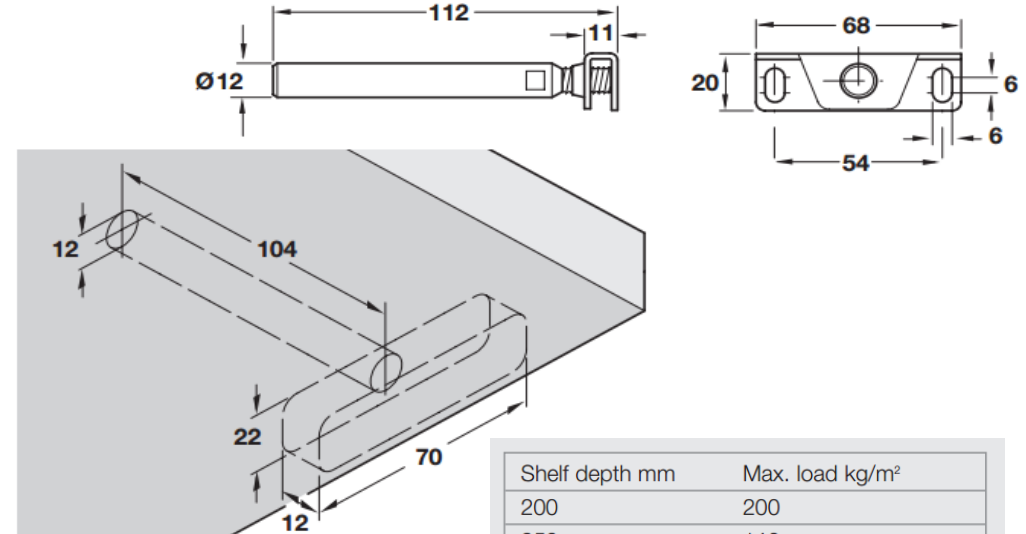

Shelf depth mm	Max. load kg/m ²
200	200
250	140
300	80

Max. 700 mm distance between shelf supports, with evenly distributed load

 Height and inclination adjustment possible as shown on the right

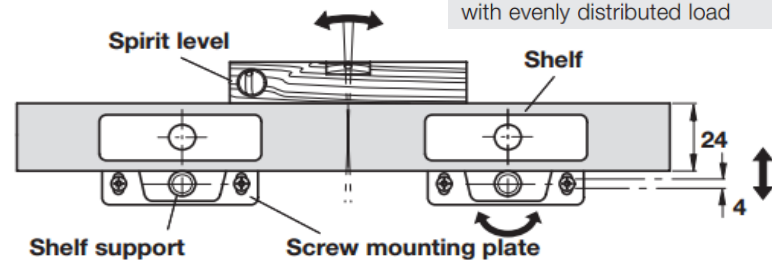

Inclination adjustment using an adjustable spanner on the supporting pin which presses against the back plate. Height adjustment via screw slots.



Terms And Conditions Of Sale

It is important to us that you're happy with your TOPSHELF UK purchase. If you're not totally satisfied you can return it within 7 days. We will give you a full refund by the same method as your original payment for products that are returned with proof of purchase in a new and unused condition and complete with all original fixings and packaging. You can return any product, as long as it is in an unused and in a re-saleable condition. Unless faulty, we may refuse the return or offer an exchange if the returns criteria are not fully met.

Returning your goods

You agree to return the goods in full, in a re-saleable, unused condition and complete with all original fixings and packaging. We recommend that you send these items with postal insurance (special delivery) as we cannot accept responsibility for items damaged or lost in transit to us. You are responsible for the cost of returning the goods, unless the goods are faulty or not as described, in which case we will refund any reasonable costs you incur in returning the item to us or arrange for collection from you free of charge.

If upon delivery you feel your item may have been damaged or lost in transit please notify us within 48 hours by e-mailing us at info@topshelfuk.co.uk You must email us a picture of any damaged or defective packaging. If after opening the packaging you find that parts have defects, significant marks or damage please notify us within 7 days by e-mailing us at info@topshelfuk.co.uk You must email us a picture of any damaged or defective items; this is very important as we need proof of damage and defects to release replacement parts.

Taking reasonable care of the goods

You agree to take reasonable care of the goods from the time that they are delivered to you until the time that they are returned.

Returns Address:

TOPSHELF UK
97 Highfield Crescent
Halesowen
West Midlands
B63 2AY